




Floor Stand Assembly Instructions:

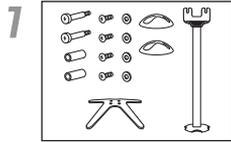


1 Remove parts and hardware from packaging.

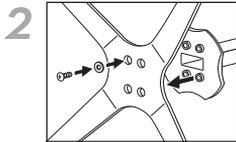


2 Affix Base to Stem by securing 4 Screw and Washer sets from the Base into the bottom of the Stem. Stand assembled Base upon a firm, flat surface.

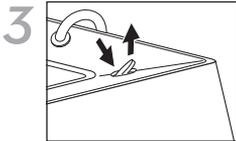


3 On the back of the Airocide unit, remove the 2 plugs closest to the power cord by pressing down on the exposed edge closest to the middle of the unit and then lifting the plug off by pulling on its outer exposed edge. Remove both plugs and save.

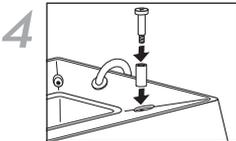


4 Slide Shoulder Bolts through the Standoff Cylinders and loosely hand-tighten them into the two lower bolt holes which were below the plugs. Leave about 1/4th of an inch between the Standoff Cylinders and the head of the shoulder bolt.

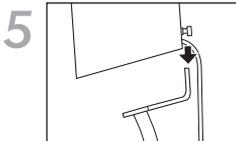


5 Place Airocide unit vertically onto the black pad atop the Stem, positioning the unit against the back mounting points.

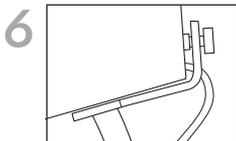


6 The mounting point should be between the Standoff Cylinders and the head of the Shoulder Bolts.

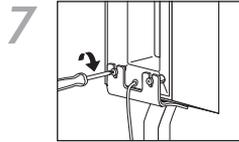


7 Tighten the Shoulder Bolts into the Airocide unit using a #2 Phillips head screwdriver.

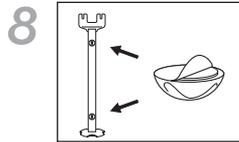

8 Peel the adhesive backing off of the Cord Clips and affix to the Stem in the location you desire.

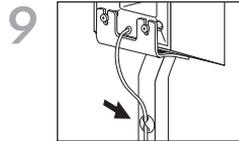

9 Snap power cord into the Cord Clips to hold cord in desired location.

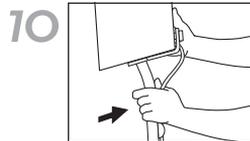

10 When moving the Floor Stand with the Airocide unit attached, lift the assembly from the stem and not the Airocide unit itself.

Plug in the power cord, push in the power button and enjoy the Clear Air Revolution!

Floor Stand Assembly Instructions

Tools required:

1. Phillips head screwdriver (# 2 drive)

Parts Inventory:

1. Stem (1)
2. Base (1)
3. M5 Screws (4)
4. M5 Washers (4)
5. Standoff Cylinders (2)
6. Shoulder Bolt (2)
7. Cord Clips (2)

