




Wall Mount Installation Instructions:

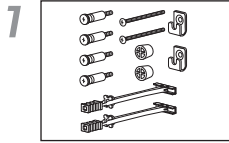


1 Remove parts and hardware from packaging.

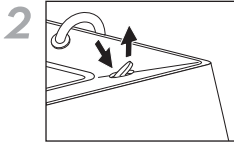

2 On the back of the Airocide unit, remove the 4 plugs by pressing down on the exposed edge closest to the middle of the unit and then lifting the plug off by pulling on the outer exposed edge. Remove all four plugs and save.

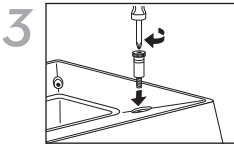


3 Using a #2 Phillips head screwdriver, tighten the Shoulder Bolts into the bolt holes which were below the plugs.

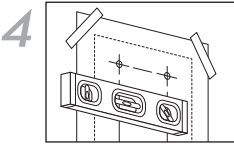


4 Identify the location on the wall in which you would like to hang the Airocide unit. The unit may be hung vertically or horizontally. For illustrative purposes, a vertical installation is shown here. Choose a location that allows for access to an electrical outlet for the power cord.


Using the template, level and stud finder, identify the points at which to drill. When using the stud finder, locate a hollow point in the wall for each Toggle Anchor. Using a pen or pencil, push through the template at the indicated marking point. You will only need to drill two holes for the wall mount system, regardless of which orientation you choose.

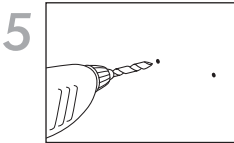


5 Remove the template from the wall and using your Power Drill with 1/2" Drill Bit, drill at your identified marking points.

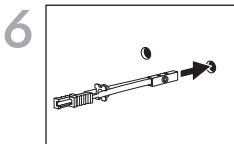


6 Slide the Toggle Anchor through the 1/2" hole by holding the metal channel flat alongside the plastic strap and then slide the metal channel through the hole.

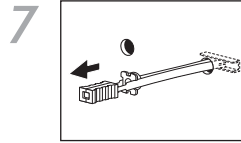


7 Hold ends of straps together between thumb and forefinger and pull towards you until the metal channel rests flat against the backside of the wall.

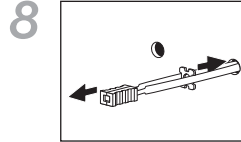


8 Continue to hold the ends of the straps so the metal channel rests flat against the wall. With your other hand, ratchet the cap towards the hole along the straps until the flange of the cap is flush with the wall.

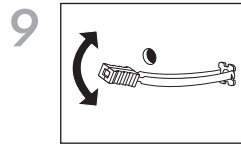


9 Place thumb between the straps at the wall. Push thumb side to side, snapping off the straps level with the flange of the cap.

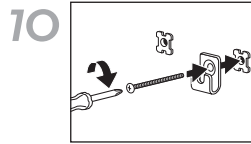

10 Using your #2 Phillips head screwdriver, screw the wall clips into the Toggler's metal channel with the M5 screws. Tighten the wall clips flush against the wall.

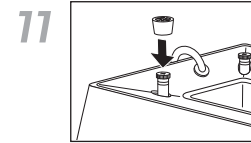

11 Place the Wall Bumpers on the Shoulder Bolts that will not be hanging from the wall clips. The Wall Bumpers are designed to be held in place by a friction-fit.

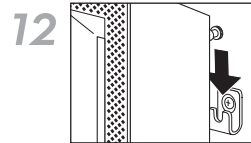

12 Hang the Airocide unit in the orientation you desire onto the Wall clips and rest the Wall Bumpers against the wall.

Plug in the power cord, push in the power button and enjoy the Clear Air Revolution!

Wall Mount Installation Instructions


Tools required:

1. Phillips head screwdriver (#2 drive)
2. Stud Finder
3. Power Drill with 1/2" drill bit
4. Template
5. Level


Parts Inventory:

1. Shoulder Bolt (4)
2. Toggler Wall Anchor (2)
3. Wall Clip (2)
4. M5 Screws (2)
5. Wall Bumper (2)

Shoulder Bolt (4)

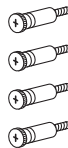

Toggler Wall
Anchor (2)

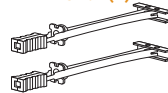

M5 Screws (2)



Wall Clip (2)



Wall Bumper (2)

