

Read carefully before installation of Replacement Chambers. Proper Reaction Chamber orientation is critical prior to insertion. Failure to observe these instructions may result in damage to the Airocide® Unit.



**CAUTION:** The Reaction Chambers will be hot. Unplug the unit and allow it to cool down for 5 minutes before installing new Reaction Chambers.

**Tip:** The Reaction Chambers can be replaced in any unit orientation, however it is easiest if you place the unit on its back (cord side down).

1. Remove the grill (1) by placing your thumbs in the thumb pulls (2) on each side and pulling the grill toward you.
2. Make sure the Reaction Chamber is cooled before proceeding. Once it has cooled, use your thumbs to slide the Reaction Chamber latches (3) away from the Reaction Chamber. (Follow arrow directions on the latches for both chambers.)

**NOTE:** There are two Reaction Chambers in your Airocide Unit. Each Reaction Chamber has different geometry and will only fit in the appropriate slot. The Reaction Chambers are labeled "A" and "B" as illustrated below. REFER TO DRAWING BELOW TO INSURE YOU HAVE THE PROPER ORIENTATION. Use the Airocide logo (4) and the control panel (5) as a reference. Follow these steps:

3. The Reaction Chamber (6) will eject once both latches have cleared the chamber opening. Pull Reaction Chamber away from the unit. Repeat for the other Reaction Chamber.
4. Remove Reaction Chamber "A" from the replacement kit. On the Airocide unit, Reaction Chamber "A" is located ABOVE the Airocide logo. Once located, insert Reaction Chamber "A" into position as indicated by pushing until you hear the latches click. Again, make sure proper alignment is followed, as illustrated in the diagram below. Once in place, remove the sticker from the top of the Reaction Chamber.
5. Locate Reaction Chamber "B" on the Airocide unit. It is located BELOW the Airocide logo. Insert Reaction Chamber "B" into position as indicated by pushing until you hear the latches click. Again, make sure proper alignment is followed, as illustrated in the diagram below. Once in place, remove the sticker from the top of the Reaction Chamber.
6. Place grill (1) back on the unit. Once the grill is back in place (magnetic latch), plug the unit in to an outlet, turn the power to the unit on, and the unit will begin running in high mode.

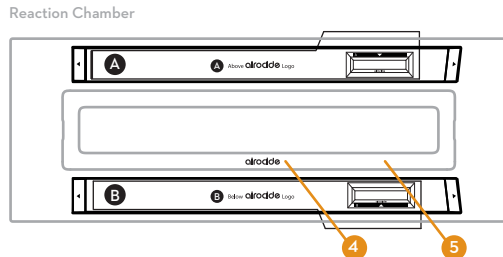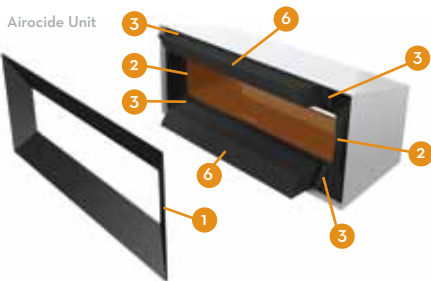

Now get back to enjoying the benefits of clear air.

# *Reaction Chamber Replacement Instructions*

**airocide<sup>®</sup>**  
*Better Air. Better Life.<sup>™</sup>*



[www.airocide.com](http://www.airocide.com)